

001	код	D	H	z	L	d
	06-001-030	3	12	1	35	6
	06-001-040	4	12	1	35	6
	06-001-050	5	12	1	35	6
	08-001-030	3	12	1	35	8
	08-001-040	4	12	1	35	8
	08-001-050	5	12	1	35	8
	08-001-060	6	12	1	35	8

301	код	D	z	H	L	d
	08-301-180	18	3	12	35	8

Приклад застосування

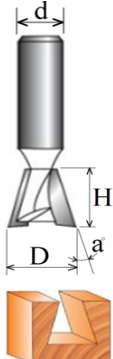 
002	код	D	H	L	d
 z = 2	06-002-180	18	10	35	6
	06-002-250	25	10	35	6
	08-002-120	12	12	35	8
	08-002-140	14	12	35	8
	08-002-160	16	12	35	8
	08-002-180	18	12	35	8
	08-002-200	20	12	35	8
	08-002-220	22	12	35	8
	08-002-250	25	12	35	8
	08-002-300	30	12	35	8
	08-002-121	12	19	35	8
	08-002-141	14	19	35	8
	08-002-161	16	19	35	8
	08-002-181	18	19	35	8
	08-002-201	20	20	35	8
	08-002-221	22	20	35	8
08-002-251	25	20	35	8	

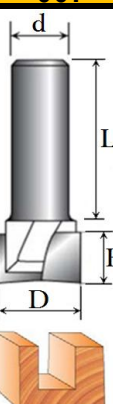 
005	код	D	a	H	h	L	d
 z = 2	08-005-110	11	30°	20		35	8
	08-005-140	14	45°	17		35	8
	08-005-136	13	60°	11		35	8
	08-005-156	15	60°	13		35	8
	08-005-206	20	60°	17		35	8
	08-005-288	29	60°	30		35	8
	06-005-100	10	90°	10		35	6
	06-005-120	12	90°	12		35	6
	08-005-100	10	90°	10		35	8
	08-005-120	12	90°	12		35	8
	08-005-160	16	90°	16		35	8
	08-005-250	25	90°	20.7		35	8
	08-005-320	32	90°	20		35	8
	12-005-400	40	90°	23		38	12
	12-005-500	50	90°	28		38	12
	08-005-412	40	120°	14		35	8
	12-005-412	40	120°	14		38	12
12-005-612	60	120°	22.5		38	12	
08-005-413	40	135°	12		35	8	
08-005-415	40	150°	9		35	8	
12-005-615	60	150°	13.5		38	12	

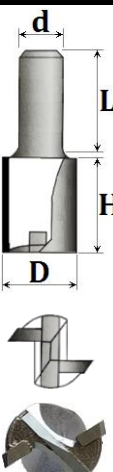 
302	код	D	z	h	H	L	d
	06-302-250	25	3	4	6	40	6
	08-302-400	40	4	5	7	65	8
	08-302-500	50	6	5	7	70	8
	12-302-500	50	6	6	8	100	12

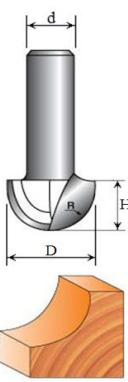
003	код	D	h	L	d
 z = 2	06-003-060	6	18	35	6
	06-003-080	8	25	35	6
	06-003-100	10	30	35	6
	06-003-120	12	30	35	6
	08-003-060	6	18	35	8
	08-003-080	8	25	35	8
	08-003-100	10	25	35	8
	08-003-120	12	30	35	8
	08-003-140	14	30	35	8
	08-003-150	15	30	35	8
	08-003-160	16	30	35	8
	08-003-180	18	30	35	8
	08-003-200	20	30	35	8
	08-003-220	22	30	35	8
	08-003-250	25	30	35	8
	08-003-300	30	30	35	8
	12-003-300	30	30	38	12
	08-003-105	10	50	35	8
	08-003-125	12	50	35	8
	08-003-145	14	50	35	8
12-003-104	10	40	38	12	
12-003-124	12	40	38	12	
12-003-144	14	40	38	12	
12-003-164	16	40	38	12	
12-003-184	18	40	38	12	
12-003-204	20	40	38	12	
12-003-214	21	40	38	12	
12-003-105	10	50	38	12	
12-003-125	12	50	38	12	
12-003-145	14	50	38	12	
12-003-165	16	50	38	12	
12-003-185	18	50	38	12	
12-003-205	20	50	38	12	

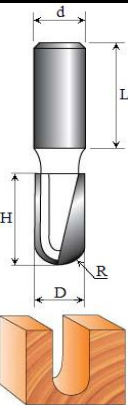
004	код	D	H	z	L	d
	08-004-015	1,5	5	1	35	8
	08-004-020	2	6	1	35	8
	08-004-025	2,5	8	1	35	8
	08-004-030	3	12	2	35	8
	08-004-032	3	18	2	42	8
	08-004-040	4	17	2	35	8
	08-004-042	4	21	2	39	8
	08-004-050	5	20	2	35	8
08-004-060	6	25	2	35	8	

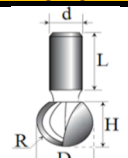
006	код	D	a°	H	z	L	d
	08-006-075	7.5	19.3°	5	2	35	8
	08-006-100	10	8°	10	2	35	8
	08-006-120	12	8°	12	2	35	8
	08-006-127	12.7	14°	12.7	2	35	8
	08-006-128	12.8	8°	20.6	2	35	8
	08-006-160	16	14°	16	2	35	8
	08-006-200	20	14°	20	2	35	8
	08-006-250	25	14°30'	25	2	35	8
	12-006-300	30	14°30'	30	2	38	12
	12-006-450	45	45°	15	2	38	12

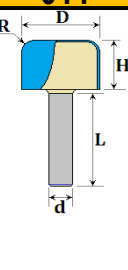
007	код	D	H	L	d
	08-007-080	8	30	60	8
	08-007-100	10	30	60	8
	08-007-120	12	30	60	8
	08-007-140	14	30	60	8
	08-007-150	15	30	60	8
	08-007-151	15	30	70	8
	08-007-160	16	30	60	8
	08-007-161	16	30	70	8
	08-007-180	18	30	60	8
	08-007-190	19	30	60	8
	08-007-200	20	30	60	8
	12-007-230	23	16	60	12
	08-007-240	24	16	40	8
	12-007-246	24	16	60	12
z = 2	08-007-250	25	16	35	8
	12-007-256	25	16	60	12
	12-007-266	26	16	60	12
	12-007-280	28	16	60	12
	08-007-300	30	16	40	8
	12-007-306	30	16	60	12
	08-007-320	32	16	35	8
	12-007-327	32	16	75	12
	12-007-356	35	16	60	12
	12-007-400	40	16	38	12
	12-007-500	50	16	38	12
	12-007-120	12	40	80	12
	12-007-140	14	40	80	12
	12-007-150	15	40	80	12
	12-007-160	16	40	80	12
	12-007-180	18	40	80	12
	12-007-210	21	40	80	12

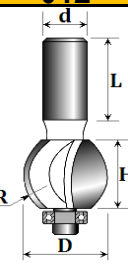
307	код	D	H	z	L	d
	08-307-082	8	20	2+1	35	8
	08-307-102	10	20	2+1	35	8
	08-307-112	11	20	2+1	35	8
	08-307-122	12	20	2+1	35	8
	08-307-132	13	20	2+1	35	8
	08-307-142	14	20	2+1	35	8
	08-307-152	15	20	2+1	35	8
	08-307-162	16	20	2+1	35	8
	08-307-172	17	20	2+1	35	8
	08-307-182	18	20	2+1	35	8
	08-307-202	20	20	2+1	35	8
	08-307-222	22	20	2+1	35	8
	12-307-128	12	81	2+1	48	12
	12-307-168	16	81	2+1	48	12

008	код	D	R	H	L	d
	06-008-060	6	3	6.35	35	6
	06-008-080	8	4	6.35	35	6
	06-008-100	10	5	7.5	35	6
	08-008-060	6	3	4	35	8
	08-008-080	8	4	6	35	8
	08-008-100	10	5	7	35	8
	08-008-120	12	6	9	35	8
	08-008-140	14	7	10	35	8
	08-008-160	16	8	11	35	8
	08-008-180	18	9	12	35	8
	08-008-200	20	10	13	35	8
	08-008-220	22	11	14	35	8
	08-008-240	24	12	14	35	8
	08-008-250	25	12.5	15	35	8
	08-008-300	30	15	19	35	8
	08-008-350	35	17.5	22	35	8
	12-008-400	40	20	25.5	38	12
	12-008-508	50.8	25.4	28.5	38	12

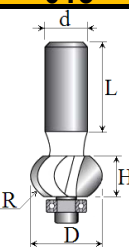
009	код	D	H	R	L	d
	08-009-060	6	20	3	35	8
	08-009-080	8	25	4	35	8
	08-009-100	10	25	5	35	8
	08-009-120	12	25	6	35	8
	08-009-140	14	25	7	35	8
	08-009-160	16	30	8	35	8
	08-009-180	18	30	9	35	8
	08-009-200	20	30	10	35	8
	08-009-105	10	30	5	80	8
	08-009-125	12	30	6	80	8
	08-009-165	16	30	8	80	8
	12-009-120	12	40	6	80	12
	12-009-140	14	40	7	80	12
	12-009-160	16	40	8	80	12

010	код	D	R	H	z	L	d
	08-010-120	24	12	22	2	35	8

011	код	D	R	H	L	d
	08-011-193	19	3	15	35	8
	08-011-245	24	5	16	35	8
	08-011-285	28	5	15	35	8
	12-011-245	24	5	15	38	12
	12-011-285	28	5	15	38	12

012	код	D	R	H	підшипник	L	d
	18-012-100	21	10	16	5×13×4, 695zz	35	8
	18-012-147	25	14.72	25	5×13×4, 695zz	35	8
	22-012-320	25.5	32	38	5×13×4, 695zz	38	12


z = 2							
--------------	--	--	--	--	--	--	--

013	код	D	R	H	підшипник	L	d
	18-013-030	20	3	6	5×13×4, 695zz	35	8
	18-013-040	22	4	8	5×13×4, 695zz	35	8
	18-013-050	24	5	10	5×13×4, 695zz	35	8
	18-013-060	27	6	12	5×13×4, 695zz	35	8
	18-013-080	30	8	16	5×13×4, 695zz	35	8
	18-013-100	33	10	20	5×13×4, 695zz	35	8
	18-013-120	38	12	24	5×13×4, 695zz	35	8
	22-013-126	38	12	24	5×13×4, 695zz	38	12

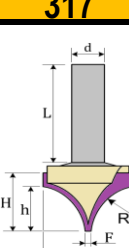
z = 2

014	код	D	R	H	підшипник	L	d
	18-014-030	19	3	8	5×13×4, 695zz	35	8
	18-014-040	21	4	9	5×13×4, 695zz	35	8
	18-014-050	23	5	10	5×13×4, 695zz	35	8
	18-014-060	25	6	11	5×13×4, 695zz	35	8
	18-014-080	29	8	12	5×13×4, 695zz	35	8
	18-014-100	33	10	16	5×13×4, 695zz	35	8
	18-014-120	37	12	18	5×13×4, 695zz	35	8
	18-014-160	45	16	20	5×13×4, 695zz	35	8
	22-014-180	49	18	22	5×13×4, 695zz	38	12
	22-014-200	53	20	24	5×13×4, 695zz	38	12
	22-014-250	63	25	27	5×13×4, 695zz	38	12

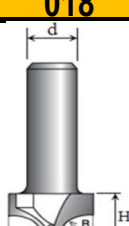
z = 2

017	код	D	H	R	h	L	d
	08-017-020	4	5	2		35	8
	08-017-030	6	7	3		35	8
	08-017-040	8	8	4		35	8
	08-017-050	10	9	5		35	8
	08-017-060	12	10	6		35	8
	08-017-080	16	11	8		35	8
	08-017-100	19	13	10		35	8
	08-017-120	24	15	12		35	8
	08-017-160	32	18	16		35	8

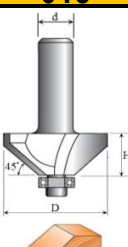
z = 2

317	код	D	H	R	F	h	L	d
	317-030-08	7,5	6	3	1,5	3,5	35	8
	317-040-08	9,5	7	4	1,5	4,5	35	8
	317-050-08	12	9	5	1,5	6	35	8
	317-060-08	14	10	6	1,5	7	35	8
	317-080-08	18	12	8	1,5	9	35	8
	317-100-08	22	15	10	2	11	35	8
	317-120-08	24	17	12	2	13	35	8

z = 2

018	код	D	R	H	c	L	d
	08-018-040	16	4	10	8	35	8
	08-018-060	20	6	12	8	35	8
	08-018-080	24	8	16	8	35	8
	08-018-100	28	10	18	8	35	8
	08-018-120	32	12	22	8	35	8
	08-018-160	35	16	25	8	35	8

z = 2

015	код	D	H	підшипник	L	d
	16-015-220	22	10.5	4×10×4, m104zz	35	6
	18-015-250	25	10	5×13×4, 695zz	35	8
	18-015-300	30	13	5×13×4, 695zz	35	8
	18-015-350	35	16	5×13×4, 695zz	35	8
	18-015-400	40	18	5×13×4, 695zz	35	8
	22-015-500	50	22.5	5×13×4, 695zz	38	12
	22-015-627	62.7	29	4,76×12,7×5, R3zz	38	12

z = 2

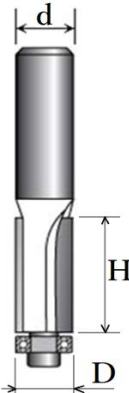
016	код	D	a	H	підшипник	L	d
	18-016-150	24	15°	22	4,76×12,7×5, R3zz	35	8
	18-016-225	31	22,5°	23	4,76×12,7×5, R3zz	35	8
	18-016-300	38	30°	23	4,76×12,7×5, R3zz	35	8
	18-016-450	48	45°	22,5	4,76×12,7×5, R3zz	35	8
	18-016-605	53	60°	16	4,76×12,7×5, R3zz	35	8
	22-016-605	53	60°	16	4,76×12,7×5, R3zz	38	12
	22-016-607	73	60°	22	4,76×12,7×5, R3zz	38	12
	22-016-758	83	75°	15	4,76×12,7×5, R3zz	38	12

z = 2

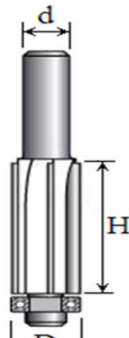
019	код	D	R	H	підшипник	L	d
	16-019-010	10	1	4	3×8×4, 693zz	35	6
	16-019-015	11	1,5	4,5	3×8×4, 693zz	35	6
	16-019-020	12	2	5	3×8×4, 693zz	35	6
	16-019-025	13	2.5	5.5	3×8×4, 693zz	35	6
	16-019-030	14	3	6	3×8×4, 693zz	35	6
	16-019-040	16	4	7	3×8×4, 693zz	35	6
	16-019-050	18	5	8	3×8×4, 693zz	35	6
	16-019-060	20	6	9	3×8×4, 693zz	35	6
	16-019-080	24	8	9	3×8×4, 693zz	35	6
	16-019-100	28	10	9	3×8×4, 693zz	35	6

z = 2

	18-019-010	14.7	1	4	4,76×12,7×5, R3zz	35	8
	18-019-015	15.7	1.5	4.5	4,76×12,7×5, R3zz	35	8
	18-019-020	16.7	2	5	4,76×12,7×5, R3zz	35	8
	18-019-025	17.7	2.5	5.5	4,76×12,7×5, R3zz	35	8
	18-019-030	18.7	3	6	4,76×12,7×5, R3zz	35	8
	18-019-040	20.7	4	7	4,76×12,7×5, R3zz	35	8
	18-019-050	22.7	5	9	4,76×12,7×5, R3zz	35	8
	18-019-060	24.7	6	10	4,76×12,7×5, R3zz	35	8
	18-019-080	28.7	8	12	4,76×12,7×5, R3zz	35	8
	18-019-100	32.7	10	16	4,76×12,7×5, R3zz	35	8
	18-019-120	36.7	12	18	4,76×12,7×5, R3zz	35	8
	18-019-140	40.7	14	20	4,76×12,7×5, R3zz	35	8
	18-019-150	42.7	15	21	4,76×12,7×5, R3zz	35	8
	18-019-160	44.7	16	22	4,76×12,7×5, R3zz	35	8
	18-019-180	48.7	18	25	4,76×12,7×5, R3zz	35	8
	22-019-200	52.7	20	25	4,76×12,7×5, R3zz	38	12
	22-019-250	62.7	25	32	4,76×12,7×5, R3zz	38	12
	22-019-300	72.7	30	37	4,76×12,7×5, R3zz	38	12
	22-019-350	82.7	35	40	4,76×12,7×5, R3zz	38	12
	22-019-400	92.7	40	45	4,76×12,7×5, R3zz	38	12


020	код	D	H	підшипник	L	d
	16-020-060	6	18	3×6×2.5, mr63zz	35	6
	16-020-080	8	20	3×8×4, 693zz	35	6
	16-020-100	10	25	4×10×4, mr104zz	35	6
	18-020-060	6	18	3×6×2.5, mr63zz	35	8
	18-020-080	8	20	3×8×4, 693zz	35	8
	18-020-101	10	12	4×10×4, mr104zz	35	8
	18-020-102	10	25	4×10×4, mr104zz	35	8
	18-020-122	12	25	4×12×4, mr604zz	35	8
	18-020-103	10	30	4×10×4, mr104zz	35	8
	18-020-123	12	30	4×12×4, mr604zz	35	8
	18-020-143	14	30	5×14×5, mr605zz	35	8
	18-020-163	16	30	5×16×5, mr625zz	35	8
	18-020-104	10	40	4×10×4, mr104zz	35	8
	18-020-124	12	40	4×12×4, mr604zz	35	8
	18-020-144	14	40	5×14×5, mr605zz	35	8
	18-020-164	16	40	5×16×5, mr625zz	35	8
	18-020-105	10	50	4×10×4, mr104zz	35	8
	18-020-125	12	50	4×12×4, mr604zz	35	8
	18-020-145	14	50	5×14×5, mr605zz	35	8
	22-020-127	12.7	51	4.7×12.7×5, r3zz	38	12
	18-020-203	20	30	5×14×5, mr605zz	35	8
	18-020-204	20	40	5×14×5, mr605zz	35	8

023	код	D	H	z	підшипник	L	d
	18-023-123	12	30	3	4×12×4, mr604zz	35	8
	18-023-143	14	30	3	5×14×5, mr605zz	35	8
	18-023-163	16	30	3	5×16×5, mr625zz	35	8
	18-023-124	12	40	3	4×12×4, mr604zz	35	8
	18-023-144	14	40	3	5×14×5, mr605zz	35	8
	18-023-164	16	40	3	5×16×5, mr625zz	35	8
	18-023-165	16	50	3	5×16×5, mr625zz	35	8
	22-023-215	21	50	3	12×21×5, 6801zz	38	12
	22-023-216	21	60	3	12×21×5, 6801zz	38	12

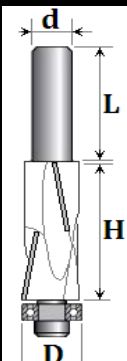
024	код	D	H	z	підшипник	L	d
	18-024-123	12	30	4	4×12×4, mr604zz	35	8
	18-024-143	14	30	4	5×14×5, mr605zz	35	8
	18-024-164	16	40	4	5×16×5, mr625zz	35	8
	18-024-165	16	50	4	5×16×5, mr625zz	35	8
	22-024-215	21	50	4	12×21×5, 6801zz	38	12
	22-024-216	21	60	4	12×21×5, 6801zz	38	12

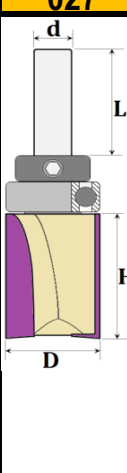
025	код	D	H	z	підшипник	L	d
	22-025-216	60	21	16	12×21×5, 6801zz	38	12

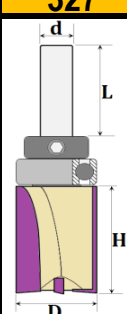
021	код	D	H	a	підшипник	L	d
	18-021-163	16	30	3°	5×16×5, mr625zz	35	8
	18-021-164	16	40	3°	5×16×5, mr625zz	35	8
	18-021-165	16	50	3°	5×16×5, mr625zz	35	8
	22-021-215	21	50	3°	12×21×5, 6801zz	38	12
	22-021-216	21	60	3°	12×21×5, 6801zz	38	12
	22-021-282	28	20	3°	8×28×9, 638zz	38	12

321	код	D	H	a	підшипник	L	d
	22-321-215	21	51	3°	A=6801, B=6801	38	12

A = 12×21×5, 6801zz
B = 12×21×5, 6801zz

026	код	D	H	a	підшипник	L	d
	18-026-164	16	40	3°	5×16×5, mr625zz	35	8
	22-026-165	16	50	3°	5×16×5, mr625zz	38	12
	22-026-196	19	60	3°	5×16×5, mr625zz	38	12

027	код	D	H	підшипник	L	d
	18-027-121	12	12	8×12×3.5, mr128zz	35	8
	18-027-122	12	20	8×12×3.5, mr128zz	35	8
	18-027-123	12	30	8×12×3.5, mr128zz	35	8
	18-027-124	12	40	8×12×3.5, mr128zz	35	8
	18-027-163	16	30	8×16×5, 688zz	35	8
	18-027-193	19	30	8×19×6, 698zz	35	8
	18-027-164	16	40	8×16×5, 688zz	35	8
	18-027-194	19	40	8×19×6, 698zz	35	8
	22-027-214	21	40	12×21×5, 6801zz	38	12
	22-027-215	21	50	12×21×5, 6801zz	38	12

327	код	D	H	z	підшипник	L	d
	16-327-102	10	12	2+1	Double 6×10×3	35	6
	18-327-121	12	10	2+1	8×12×3.5, mr128zz	35	8
	18-327-122	12	20	2+1	8×12×3.5, mr128zz	35	8
	18-327-161	16	15	2+1	8×16×5, 688zz	35	8
	18-327-163	16	20	2+1	8×16×5, 688zz	35	8

028	код	D	H	z	підшипник	L	d
	18-028-163	16	30	3	8×16×5, 688zz	35	8
	18-028-193	19	30	3	8×19×6, 698zz	35	8
	18-028-164	16	40	3	8×16×5, 688zz	35	8
	18-028-194	19	40	3	8×19×6, 698zz	35	8
	18-028-165	16	50	3	8×16×5, 688zz	35	8
	22-028-215	21	50	3	12×21×5, 6801zz	38	12
	22-028-216	21	60	3	12×21×5, 6801zz	38	12

328	код	D	H	z	підшипник	L	d
	18-328-123	12	30	4	8×12×3.5, mr128zz	35	8
	18-328-124	12	40	4	8×12×3.5, mr128zz	35	8
	18-328-164	16	40	4	8×16×5, 688zz	35	8
	18-328-165	16	50	4	8×16×5, 688zz	35	8
	22-328-215	21	50	4	12×21×5, 6801zz	38	12
	22-328-216	21	60	4	12×21×5, 6801zz	38	12

029	код	D	H	z	підшипник	L	d
	22-029-216	21	60	2+16	12×21×5, 6801zz	38	12

032	код	D	H			L	d
	08-032-020	33	2			35	8
	08-032-030	33	3			35	8
	08-032-040	33	4			35	8
	08-032-050	33	5			35	8
	08-032-060	33	6			35	8
	08-032-080	33	8			35	8
	08-032-100	33	10			35	8
	08-032-120	33	12			35	8
	08-032-160	33	16			35	8

033	код	D	H	z	підшипник	L	d
	18-033-030	36	3	4	8×16×5, 688zz	35	8
	18-033-040	36	4	4	8×16×5, 688zz	35	8
	18-033-050	36	5	4	8×16×5, 688zz	35	8
	18-033-060	36	6	4	8×16×5, 688zz	35	8
	18-033-080	36	8	4	8×16×5, 688zz	35	8
	18-033-100	36	10	4	8×16×5, 688zz	35	8

036	код	D	R	h	H	z	L	d
	08-036-030	24	3	6	14	2	35	8
	08-036-040	26	4	8	15	2	35	8
	08-036-050	27	5	10	16	2	35	8
	08-036-060	30	6	12	18.5	2	35	8
	08-036-080	32	8	16	22	2	35	8
	08-036-100	35	10	20	28	2	35	8
	08-036-120	40	12	22	34	2	35	8
	12-036-140	48	14	28	36	2	38	12
	12-036-160	52	16	32	39	2	38	12

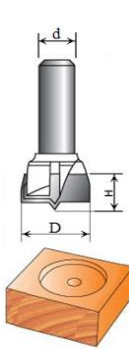
030	код	D	H	підшипник	L	d
	18-030-020	33	2	5×13×4, 695zz	50	8
	18-030-025	33	2,5	5×13×4, 695zz	50	8
	18-030-030	33	3	5×13×4, 695zz	50	8
	18-030-040	33	4	5×13×4, 695zz	50	8
	18-030-050	33	5	5×13×4, 695zz	50	8
	18-030-060	33	6	5×13×4, 695zz	50	8
	18-030-080	33	8	5×13×4, 695zz	50	8
	18-030-090	33	9,5	5×13×4, 695zz	35	8
	18-030-100	33	10	5×13×4, 695zz	50	8
	22-030-100	33	10	5×13×4, 695zz	50	12
	18-030-120	33	12	5×13×4, 695zz	50	8
	22-030-120	33	12	5×13×4, 695zz	50	12
	18-030-140	33	14	5×13×4, 695zz	35	8
	22-030-140	33	14	5×13×4, 695zz	50	12
	18-030-160	33	16	5×13×4, 695zz	35	8
	18-030-180	33	18	5×13×4, 695zz	35	8
	18-030-200	33	20	5×13×4, 695zz	35	8
	18-030-250	33	25	5×13×4, 695zz	35	8
	22-030-300	33	30	5×13×4, 695zz	38	12
	22-030-105	56	10	5×13×4, 695zz	38	12
	22-030-056	66	5	5×13×4, 695zz	38	12

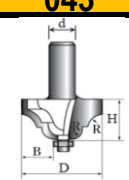
031	код	D	H	підшипник	L	d
	18-031-020	40	2	5×13×4, 695zz	50	8
	18-031-025	40	2.5	5×13×4, 695zz	50	8
	18-031-030	40	3	5×13×4, 695zz	50	8
	18-031-040	40	4	5×13×4, 695zz	50	8
	18-031-050	40	5	5×13×4, 695zz	50	8
	18-031-060	40	6	5×13×4, 695zz	50	8
	18-031-080	40	8	5×13×4, 695zz	50	8
	18-031-100	40	10	5×13×4, 695zz	50	8
	18-031-120	40	12	5×13×4, 695zz	50	8
	18-031-035	50	3	5×13×4, 695zz	50	8
	18-031-045	50	4	5×13×4, 695zz	50	8

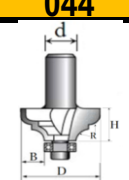
034	код	D	f	a	H	h	L	d
	08-034-090	14	3	90°	10	5.5	35	8
	08-034-091	18	3	90°	13	7.5	35	8
	08-034-092	22.2	3	90°	17.1	9.5	35	8
	08-034-135	22	2	135°	10	4.14	35	8

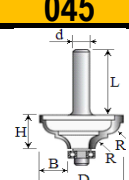
035	код	D	a	c	H	L	d
	08-035-300	26	30°	12	12.7	35	8
	08-035-450	25	45°	10	8	35	8

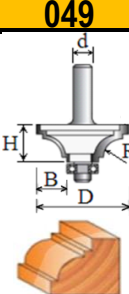
037	код	D	R	H	підшипник	B, h	d
	18-037-100	24	10	24	5×16×5, mr625zz	18	8
	18-037-147	26	14.72	30	5×16×5, mr625zz	22.2	8
	22-037-320	28.5	32	47	5×16×5, mr625zz	38	12

040	код	D	H			L	d
	08-040-120	12	18			35	8
	08-040-150	15	18			35	8
	08-040-153	15	18			90	8
	08-040-160	16	18			35	8
	08-040-180	18	18			35	8
	08-040-200	20	18			35	8
	08-040-203	20	18			90	8
	08-040-220	22	18			35	8
	08-040-250	25	18			35	8
	08-040-260	26	18			35	8
	08-040-280	28	18			35	8
	08-040-300	30	18			35	8
	08-040-320	32	18			35	8
	08-040-350	35	18			35	8
	08-040-400	40	18			35	8
	08-040-450	45	18			35	8
	08-040-500	50	18			35	8
	12-040-550	55	18			38	12
	12-040-600	60	18			38	12
	12-040-680	68	20.5			38	12

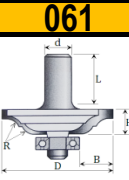
043	код	D	H	R	дшипник	L	d
	18-043-040	33	12	4	3x4, 695zz	35	8
	18-043-060	40	16	6	3x4, 695zz	35	8
	18-043-080	50	20	8	3x4, 695zz	35	8

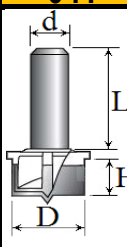
044	код	D	H	R	дшипник	L	d
	18-044-040	30	12	4	3x4, 695zz	35	8
	18-044-060	38	16	6	3x4, 695zz	35	8
	18-044-080	45	20	8	3x4, 695zz	35	8


045	код	D	H	R	дшипник	L	d
	18-045-040	32	14	4	3x4, 695zz	35	8
	18-045-060	40	18	6	3x4, 695zz	35	8
	18-045-080	50	22	8	3x4, 695zz	35	8

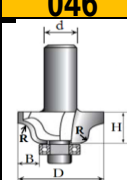
049	код	D	H	R	дшипник	L	d
	18-049-040	29	12	4	3x4, 695zz	35	8
	18-049-050	31	13	5	3x4, 695zz	35	8
	18-049-060	33	14	6	3x4, 695zz	35	8
	18-049-080	38	16	8	3x4, 695zz	35	8
	18-049-100	42	18	10	3x4, 695zz	35	8
	18-049-120	46	20	12	3x4, 695zz	35	8

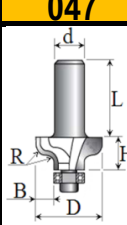
051	код	D	H	R	дшипник	L	d
	18-051-040	30	10	4	3x4, 695zz	35	8
	18-051-060	38	14	6	3x4, 695zz	35	8
	18-051-080	45	18	8	3x4, 695zz	35	8

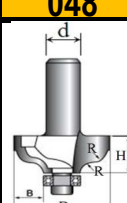
061	код	D	H	R	дшипник	L	d
	18-061-040	33	8	4	3x4, 695zz	35	8
	18-061-060	40	10	6	3x4, 695zz	35	8
	18-061-080	50	12	8	3x4, 695zz	35	8

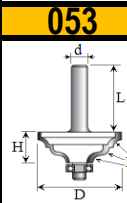
041	код	D	H			L	d
	08-041-350	35	12			35	8

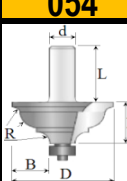
042	код	z	D	H		L	d
	08-042-350	3	35	18		35	8

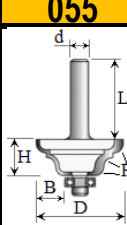
046	код	D	H	R	підшипник	L	d
	18-046-040	30	12	4	5x13x4, 695zz	35	8
	18-046-060	38	16	6	5x13x4, 695zz	35	8
	18-046-080	45	20	8	5x13x4, 695zz	35	8

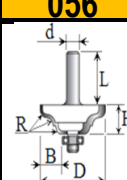
047	код	D	H	R	підшипник	L	d
	18-047-040	30	12	4	5x13x4, 695zz	35	8
	18-047-060	38	16	6	5x13x4, 695zz	35	8
	18-047-080	45	20	8	5x13x4, 695zz	35	8

048	код	D	H	R	підшипник	L	d
	18-048-040	33	12	4	5x13x4, 695zz	35	8
	18-048-060	40	16	6	5x13x4, 695zz	35	8
	18-048-080	50	20	8	5x13x4, 695zz	35	8

053	код	D	H	R	підшипник	L	d
	18-053-040	41	16	4	5x13x4, 695zz	35	8
	18-053-060	52	22	6	5x13x4, 695zz	35	8
	22-053-080	65	22	8	5x13x4, 695zz	38	12

054	код	D	H	R	підшипник	L	d
	18-054-040	38	16	4	5x13x4, 695zz	35	8
	18-054-060	50	22	6	5x13x4, 695zz	35	8

055	код	D	H	R	підшипник	L	d
	18-055-040	38	16	4	5x13x4, 695zz	35	8
	18-055-060	50	22	6	5x13x4, 695zz	35	8
	22-055-080	62	30	8	5x13x4, 695zz	38	12

056	код	D	H	R	підшипник	L	d
	18-056-040	40	14	4	5x13x4, 695zz	35	8
	18-056-060	53	20	6	5x13x4, 695zz	35	8

062	код	D	H	R	підшипник	L	d
	18-062-040	30	8	4	5×13×4, 695zz	35	8
	18-062-060	38	10	6	5×13×4, 695zz	35	8
	18-062-080	45	12	8	5×13×4, 695zz	35	8
z = 2							

065	код	D	H	R	підшипник	L	d
	18-065-040	33	8	4	5×13×4, 695zz	35	8
	18-065-060	40	10	6	5×13×4, 695zz	35	8
	18-065-080	50	12	8	5×13×4, 695zz	35	8
z = 2							

063	код	D	H	R	підшипник	L	d
	18-063-040	32	10	4	5×13×4, 695zz	35	8
	18-063-060	40	12	6	5×13×4, 695zz	35	8
	18-063-080	50	14	8	5×13×4, 695zz	35	8
z = 2							

066	код	D	H	R	підшипник	L	d
	18-066-030	40	12	3	5×13×4, 695zz	35	8
	18-066-040	50	16	4	5×13×4, 695zz	35	8
	22-066-050	63	20	5	5×13×4, 695zz	38	12
z = 2							

064	код	D	H	R	підшипник	L	d
	18-064-040	30	8	4	5×13×4, 695zz	35	8
	18-064-060	38	10	6	5×13×4, 695zz	35	8
	18-064-080	45	12	8	5×13×4, 695zz	35	8
z = 2							

067	код	D	H	R	підшипник	L	d
	18-067-030	40	12	3	5×13×4, 695zz	35	8
	18-067-040	50	15	4	5×13×4, 695zz	35	8
	22-067-063	63	19	6.35	5×13×4, 695zz	38	12
z = 2							

068	код	D	H	R	підшипник	L	d
	18-068-400	40	8	8	5×13×4, 695zz	35	8
	18-068-500	50	10	8	5×13×4, 695zz	35	8
	22-068-640	64	11	12	5×13×4, 695zz	38	12
z = 2							

078	код	D	H	R	підшипник	L	d
	18-078-100	41	10	24	5×13×4, 695zz	35	8
	18-078-120	45	12	26	5×13×4, 695zz	35	8
	22-078-140	51	14	28	5×13×4, 695zz	38	12
z = 2							

071	код	D	H	R	підшипник	L	d
	18-071-250	25.4	30.2	6.35	5×13×4, 695zz	35	8
	18-071-300	30.1	35	8.7	5×13×4, 695zz	35	8
	22-071-350	35	40	10	5×13×4, 695zz	38	12
z = 2							

094	код	D	H	V	підшипник	L	d
	18-094-190	19	25	4.7	5×13×4, 695zz	35	8
	18-094-240	24	35	5.5	5×13×4, 695zz	35	8
	22-094-270	27	42	7	5×13×4, 695zz	38	12
z = 2							

093	код	D	H	R1/R2	підшипник	L	d
	18-093-250	25	20	4/6	5×13×4, 695zz	35	8
	18-093-290	29	25	6/8	5×13×4, 695zz	35	8
z = 2							

097	код	D	H	R	підшипник	L	d
	18-097-250	25	35	4	5×13×4, 695zz	35	8
	22-097-300	30	40	5	5×13×4, 695zz	38	12
z = 2							

098	код	D	H	R	підшипник	L	d
	22-098-550	55.5	28.6	7.5	5×16×5, m625zz	38	12
z = 2							

099	код	D	H	R1/R2	підшипник	L	d
	22-099-420	42	51	12/15	5×16×5, m625zz	38	12
z = 2							

101	код	D	H	R	L	d
	08-101-030	15	10	3	35	8
	08-101-040	20	12	4	35	8
	08-101-050	25	15	5	35	8
	08-101-060	30	20	6	35	8

103	код	D	H	R	L	d
	08-103-030	15	10	3	35	8
	08-103-040	20	12	4	35	8
	08-103-050	25	15	5	35	8
	08-103-060	30	18	6	35	8

104	код	D	H	R	h	c	L	d
	08-104-060	24	14	6	12	4.5	35	8
	08-104-080	28	18	8	16	5.5	35	8

102	код	D	H	R	L	d
	08-102-030	15	10	3	35	8
	08-102-040	20	12	4	35	8
	08-102-050	22	15	5	35	8

105	код	D	H	R	h	c	L	d
	08-105-060	19	15	6	10	7	35	8
	08-105-080	22	18.5	8	14	6	35	8
	08-105-100	24	22.5	10	18	7.8	35	8
	08-105-120	28	27	12	22	8	35	8

107	код	D	H	R	L	d
	08-107-030	20	11.5	3	35	8
	08-107-040	24	11.5	4	35	8
	08-107-050	25	15	5	35	8

108	код	D	H	R	L	d
	08-108-030	16	10	3	35	8
	08-108-040	22	12	4	35	8
	08-108-060	28	15	6	35	8
	08-108-080	36	20	8	35	8

109	код	D	H	R	h	L	d
	08-109-127	34.9	15.9	12.7	9	35	8
	08-109-518	50	17	18	10	40	8

112	код	D	H	R	L	d
	08-112-030	22	6	3	35	8
	08-112-040	28	8	4	35	8
	08-112-050	34	10	5	35	8

110	код	D	H	R	L	d
	08-110-030	22	6	3	35	8
	08-110-040	28	8	4	35	8
	08-110-050	34	10	5	35	8

113	код	D	H	R	L	d
	08-113-030	22	6	3	35	8
	08-113-040	28	8	4	35	8
	08-113-050	34	10	5	35	8

111	код	D	H	R	L	d
	08-111-030	22	6	3	35	8
	08-111-040	28	8	4	35	8
	08-111-050	34	10	5	35	8

115	код	D	H	R	h	L	d
	08-115-160	16	7	20	5	35	8
	08-115-220	22	9	20	6	35	8
	08-115-280	28	11	20	7	35	8
	08-115-340	34	12	20	7	35	8
	08-115-400	40	13	25	7	35	8
	08-115-500	50	14	30	9	35	8

114	код	D	H	R	h	c	L	d
	08-114-060	22	6	6	4	10	35	8
	08-114-080	28	8	8	5	13	35	8
	08-114-100	34	10	10	6	16	35	8

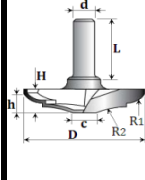

121	код	D	H	R	h	L	d
	08-121-400	40	10	42.5	5	35	8
	08-121-500	50	11	55	6	35	8
	12-121-600	60	12	67.5	7	38	12

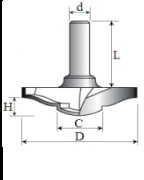
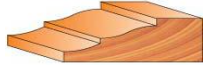 
ВОКОНАННЯ - anti-kickback

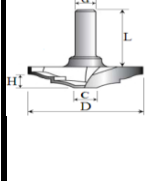

z = 2

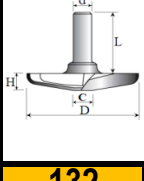

122	код	D	H	h	R	S	L	d
	08-122-400	40	11	9	13	16	33	8
	08-122-500	50	13	11	20	18	33	8
	12-122-600	60	13	11	25	20	35	12

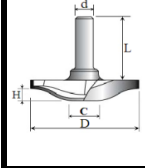

z = 2

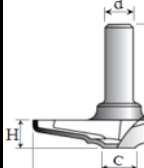
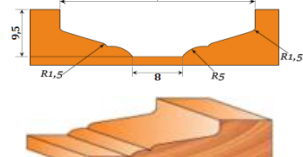
124	код	D	H	h	R1/R2	с	L	d
	08-124-400	40	10	8	8/15	8	35	8
	08-124-500	50	9	9	8.5/30	10	35	8
	12-124-600	60	10	11	10/30	12	38	12
	$z = 2$							

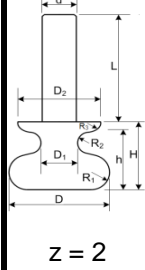

125	код	D	H	h	R1/R2	с	L	d
	08-125-400	40	11	7		16	35	8
	08-125-500	50	13	9	18/21	22	35	8
	12-125-600	60	16	11	20/21	24	38	12
	$z = 2$							

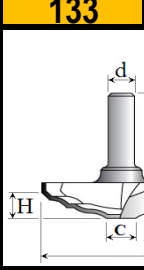
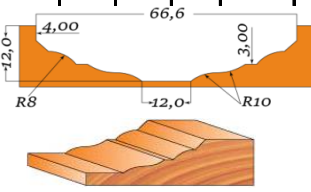
126	код	D	H	h	R1/R2	с	L	d
	08-126-400	40	12	7		8	35	8
	08-126-500	50	13	8	8.5/20	10	35	8
	12-126-600	60	14	9		12	38	12
	$z = 2$							

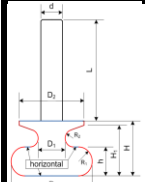
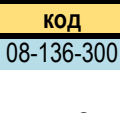 
131	код	D	H	h	R	с	L	d
	08-131-400	40	10	6	4	8	35	8
	08-131-500	50	11.5	8.5	5	10	35	8
	12-131-600	60	12.7	9.5	5	12	38	12
	$z = 2$ $\alpha = 10^\circ$							

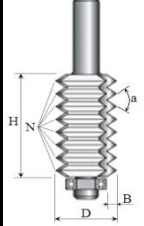

129	код	D	H	h	R	с	L	d
	08-129-400	40	9	5		10	35	8
	08-129-500	50	12	7	20	11	35	8
	12-129-600	60	14	9		12	38	12
	$z = 2$							

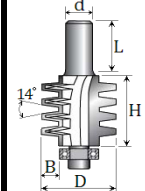

132	код	D	H	с	R1/R2	z	L	d
	08-132-349	34.9	9.5	8	1.5/5	2	35	8
								

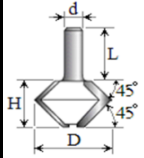

130	код	D	H	h	D1	D2	L	d
	08-130-236	23.6	18	16.2	10.2	19.6	45	8
	08-130-300	30	19.5	17.5	11	21	45	8
	08-130-381	38.1	20.7	17	17.1	22.3	45	8
								
$z = 2$								
		код	R1	R2	R3			
		08-130-236	4.7	2.5	2			
		08-130-300	5	2.5	2			
		08-130-381	6	1.8	3			

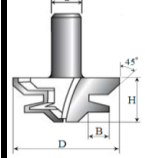
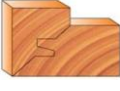 
133	код	D	H	с	R1/R2	z	L	d
	12-133-666	66.6	12	12	8/10	2	38	12
								


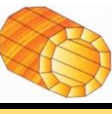 
136	код	D	H	h	D1	D2	L	d
	08-136-300	30	19.5	10	11	24	45	8
								
$z = 2$								
		код	R1	R2				
		08-136-300	5	3				

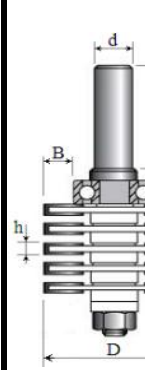
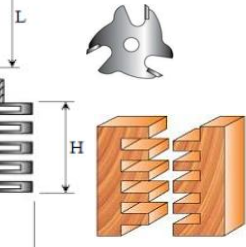
150	код	D	H	N	підшипник	L	d
	18-150-305	22	30	5	5×16×5, mr625zz	35	8
	18-150-410	20	40	10	5×16×5, mr625zz	35	8
	22-150-548	26	54	8	5×16×5, mr625zz	38	12
	22-150-549	25	54	9	6×19×6, mr626zz	38	12
	$z = 2$						

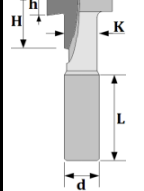

151	код	D	H	B	підшипник	L	d
	18-151-400	33	40	7	6×19×6, mr626zz	35	8
	22-151-500	33	50	7	6×19×6, mr626zz	38	12
	$z = 2$						

157	код	D	H	L	d	
	12-157-480	48	30		38	12
	$z = 2$					

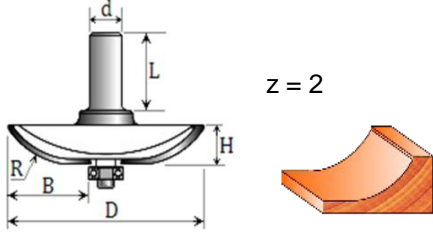
154	код	D	H	B	L	d
	08-154-500	50	22	7		35
	12-154-700	69.8	32	8		38
	$z = 2$					

158	код	D	H	L	d	
	08-158-450	45	22.2		35	
	$z = 2$					

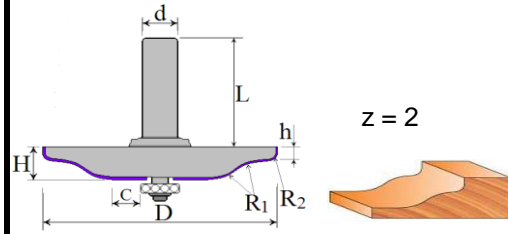
164	код	D	H	B	підшипник	h	d
	22-164-480	48	12-40	10	8×28×9, 638zz	4	12
							

166	код	D	H	K	L	d
	08-166-095	9.5	9.5	4.75		35
	08-166-127	12.7	9.5	8		35
	$z = 2$					

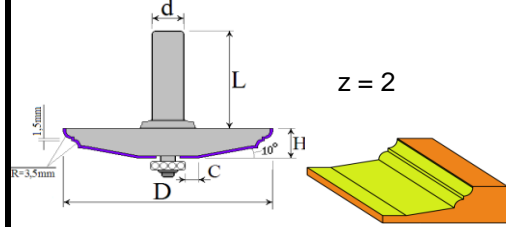
201	код	D	H	R	дшипник	L	d
	22-201-730	73	12	30	3×4, 695zz	38	12
	22-201-830	83	13	30	3×4, 695zz	38	12
	22-201-930	93	14	30	3×4, 695zz	38	12
	22-201-103	103	15	30	3×4, 695zz	38	12



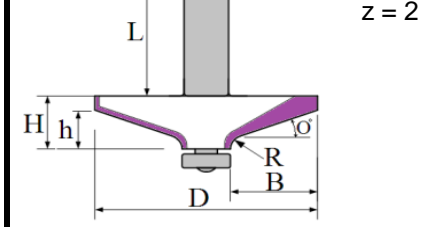
202	код	D	H/h	R1/R2	підшипник	L/c	d
	22-202-730	73	12/5	3/20	5×13×4, 695zz	38/7	12
	22-202-830	83	13/6	3/20	5×13×4, 695zz	38/9	12
	22-202-930	93	14/6	3/25	5×13×4, 695zz	38/9	12
	22-202-103	103	15/6	3/30	5×13×4, 695zz	38/10	12



204	код	D	H	R	дшипник	L	d
	22-204-730	73	12	30	3×4, 695zz	38	12
	22-204-830	83	13	35	3×4, 695zz	38	12
	22-204-930	93	14	40	3×4, 695zz	38	12
	22-204-103	103	15	45	3×4, 695zz	38	12



205	код	D	H	h/R	підшипник	L	d
	18-205-500	50	10.4	3/3	5×13×4, 695zz	35	8
	22-205-600	60	13.5	4.5/4	5×13×4, 695zz	38	12



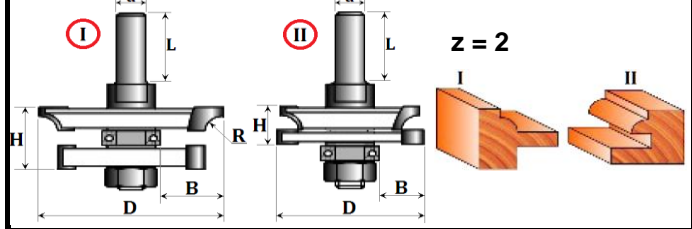
211	код	D	R	H	дшипник	L	d
	22-211-430	43	30	50	3×4, 695zz	38	12



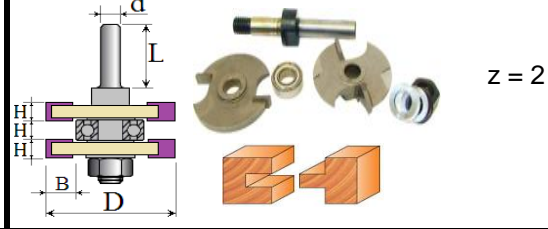
212	код	D	R1/R2	H/h	підшипник	L/C	d
	22-212-430	43	20/3	50/4	5×13×4, 695zz	38/10	12



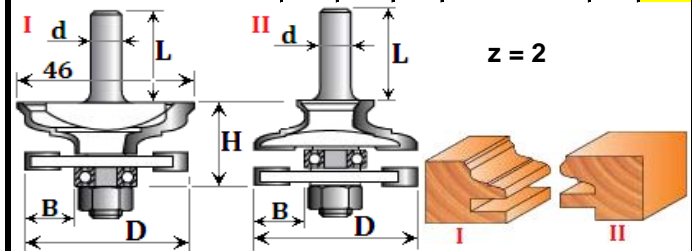
230	код	D	B/R	H	дшипник	L	d
I	22-230-500	50	17/5	21	6×5, 688zz	38	12
		40	12/5	13	6×5, 688zz	38	12



220	код	D	B	H	підшипник	L	d
	18-220-400	41	9.5	6	8×22×7, 608zz	35	8
	22-220-476	47.6	12.8	6.35	8×22×7, 608zz	38	12



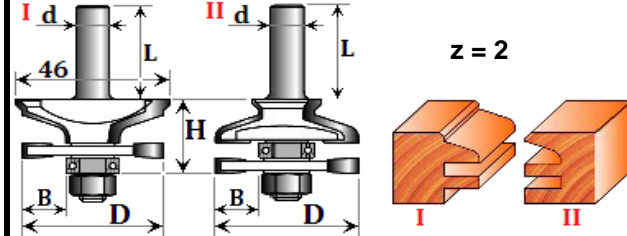
232	код	D	B	H	підшипник	L	d
	18-232-420	42	13	24	8×16×5, 688zz	35	8
	22-232-420	42	13	24	8×16×5, 688zz	38	12



224	код	D	S	H/h	підшипник	L	d
z = 2	18-224-420	42	21-22	13/4	8×16×5, 688zz	35	8



233	код	D	B	H	дшипник	L	d
	18-233-420	42	13	24	6×5, 688zz	35	8
	22-233-420	42	13	24	6×5, 688zz	38	12



234	код	D	B	H	підшипник	L	d
	18-234-420	42	13	24	8×16×5, 688zz	35	8
	22-234-420	42	13	24	8×16×5, 688zz	38	12

235	код	D	B	H	підшипник	L	d
	18-235-420	42	13	24	8×16×5, 688zz	35	8
	22-235-420	42	13	24	8×16×5, 688zz	38	12

236	код	D	H	B	дшипник	L	d
	18-236-420	42	22	13	6×5, 625zz	35	8

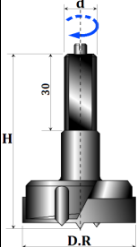
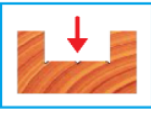 
239	код	D/S	H	h	дшипник	L	d
Ⓘ	22-239-560	56/36	25.25	5	6×5, 688zz	38	12
Ⓜ		56/56	25.25	5	6×5, 688zz	38	12
Ⓝ		-/37	-	8	6×5, 688zz	35	8

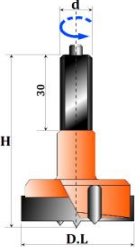
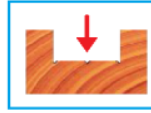 
242	код	D	O	H		L	d
	08-242-370	37	22.5°	22.2		35	8
	12-242-440	44	22.5°	30		38	12

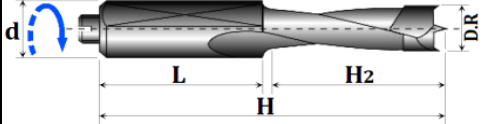
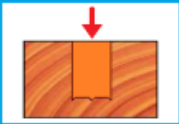
243	код	D	c	H	H1	L	d
Ⓘ	12-243-330	33	8.5	41.5	8.5	38	12
Ⓜ		33	8	44.5	8.5	38	12

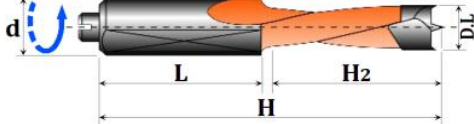
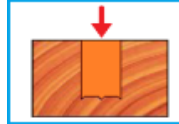
244	код	D	H	B		L	d
Ⓘ	12-244-318	31.8	73.9	6.4		38	12
Ⓜ		31.8	40	6.4		38	12

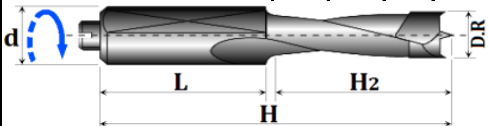
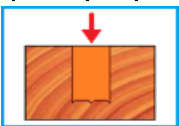
246	код	D	H	B	дшипник	L	d
Ⓘ	22-246-280	72	15	28	-	38	12
Ⓜ		69	15	28	3×4, 695zz	38	12

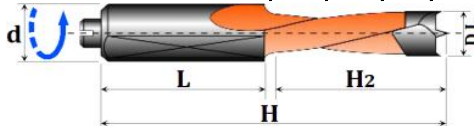
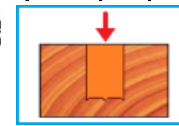
500	код	D.R	H			L	d
	10-500-150	15	57			30	10
	10-500-200	20	57			30	10
	10-500-350	35	57			30	10
RIGHT							
							

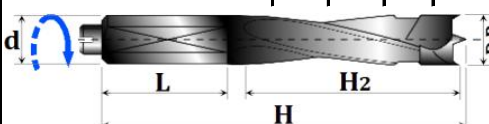
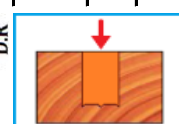
501	код	D.L	H			L	d
	10-501-150	15	57			30	10
	10-501-200	20	57			30	10
	10-501-350	35	57			30	10
LEFT							
							

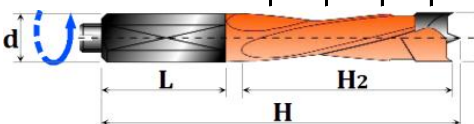
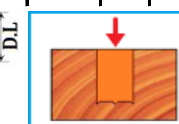
510	код	D.R	H	H2		L	d
	10-510-050	5	57.5	27		27	10
	10-510-080	8	57.5	27		27	10
RIGHT							
							

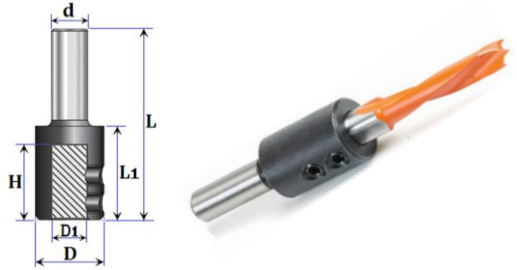
511	код	D.L	H	H2		L	d
	10-511-050	5	57.5	27		27	10
	10-511-080	8	57.5	27		27	10
LEFT							
							

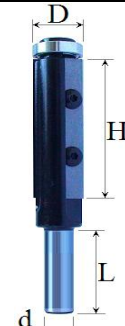
512	код	D.R	H	H2		L	d
	10-512-045	4.5	70	35		30	10
RIGHT							
							

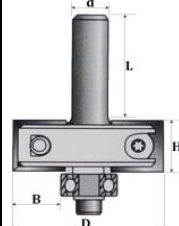
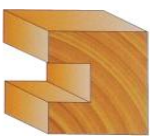
513	код	D.L	H	H2		L	d
	10-513-045	4.5	70	35		30	10
LEFT							
							

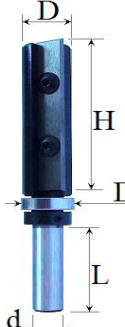
514	код	D.R	H	H2		L	d
	10-514-070	7	70	43		20	10
RIGHT							
							

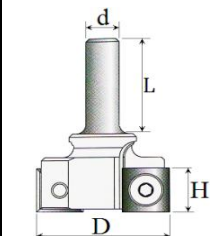
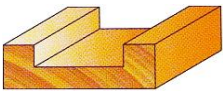 
515	код	D.L	H	H2		L	d
	10-515-070	7	70	43		20	10
LEFT							
							

012	код	D	D1	H		L1	L	d
адаптор для присадочних свердл	012-810-00	19	10	20		27	62	8
								

557	код	D	H	підшипник	L	d
	18-557-193	19	30	5×19×6, 635zz	35	8
	18-557-194	19	40	5×19×6, 635zz	35	8
	22-557-215	21	50	12×21×5, 6801zz	38	12
z = 2						
<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">гвинти, М3.5 VM-02-35</div> <div style="border: 1px solid black; padding: 2px;">Ножі: 30*14*2мм 40*14*2мм 50*14*2мм</div> </div>						

553	код	D	H	B	підшипник	L	d
	22-553-464	46	14	15	5×16×5, 625zz	60	12
z = 2							
<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">гвинти, М5 VM-06-57</div> <div style="border: 1px solid black; padding: 2px;">Ножі: 14*14*2мм</div> </div> 							

558	код	D	H	підшипник	L	d
	18-558-193	19	30	8×19×6, 698zz	35	8
	18-558-194	19	40	8×19×6, 698zz	35	8
	22-558-215	21	50	12×21×5, 6801zz	38	12
z = 2						
<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">гвинти, М3.5 VM-02-35</div> <div style="border: 1px solid black; padding: 2px;">Ножі: 30*14*2мм 40*14*2мм 50*14*2мм</div> </div>						

554	код	z	D	□H	змінні ножі	L	d
	12-554-400	2	40	14	14×14×2	38	12
	12-554-600	3	60	14	14×14×2	38	12
<div style="border: 1px solid black; padding: 2px; display: inline-block;">гвинти, М5 VM-06-57</div> 							

600	код	D	H	L	d
	08-600-060	6	30	65	8
	08-600-080	8	32	65	8
	03-600-031	3	12	40	3
	04-600-041	4	14	40	4
	06-600-062	6	25	60	6
	08-600-083	8	30	60	8

Z=2

601	код	D	H	L	d
	03-601-031	3	12	40	3
	04-601-041	4	14	40	4
	04-601-043	4	25	55	4
	06-601-062	6	20	46	6
	06-601-063	6	30	60	6
	06-601-064	6	40	80	6
	06-601-065	6	50	100	6
	08-601-083	8	30	60	8
	08-601-084	8	40	80	8
	08-601-085	8	50	100	8
	12-601-124	12	40	80	12
	12-601-125	12	50	100	12
12-601-127	12	70	130	12	
12-601-129	12	100	165	12	

Z=2

609	код	R	h	O	L	d
	03-609-140	0,5	12	10°	40	3
	04-609-140	0,5	16	12.6°	40	4
	06-609-361	0,75	32	8.2°	60	6
	06-609-380	0,5	32	9°	80	6
	06-609-381	0,75	32	8.2°	80	6

Z=2

615	код	D	H	L	d
	31-615-120	3,175	12	40	3,175
	03-615-020	2	7	36	3
	03-615-031	3	12	40	3
	03-615-032	3	25	50	3
	04-615-041	4	14	40	4
	06-615-062	6	25	60	6
	08-615-083	8	30	80	8
10-615-103	10	35	80	10	
12-615-124	12	40	80	12	

Z=1

620	код	D	H	L	d
	03-620-031	3	12	40	3
	04-620-041	4	14	40	4
	06-620-062	6	20	60	6
	06-620-064	6	25	60	6

Z=1+1

604	код	D	H	L	d
	03-604-031	3	12	40	3
	04-604-041	4	14	40	4

Z=2

605	код	D	H	L	d	
	03-605-020	2	8	3	40	3
	03-605-031	3	12	3	40	3
	04-605-041	4	14	4	40	4
	04-605-042	4	20	4	50	4
	06-605-061	6	20	6	50	6
	06-605-062	6	25	6	60	6
	08-605-084	8	40	8	80	8

Z=2

606	код	R	D	H	L	d
	31-606-031	1,59	3,175	18	54	3,175
	06-606-060	3	6	32	70	6
	08-606-080	4	8	42	80	8

Z=4

610	код	R	h	O	L	d
	04-610-197	0,8	19,7	7°	50	4
	06-610-360	0,8	36	7°	80	6
	06-610-344	1,5	34,4	5°	80	6
	08-610-460	2	46	5°	100	8

Z=3

616	код	D	H	L	d
	31-616-120	3,175	12	40	3,175
	04-616-150	4	15	45	4
	03-616-031	3	10	40	3
	04-616-041	4	12	40	4
	06-616-061	6	16	45	6
	08-616-082	8	20	45	8
	10-616-102	10	20	50	10
	12-616-122	12	25	60	12

Z=1

621	код	D	H	L	d
	03-621-031	3	12	40	3
	04-621-041	4	14	40	4
	06-621-062	6	20	60	6
	08-621-083	8	35	80	8

Z=2+2

630	код	O	H	T	L	d
	03-630-314	30°	5,6	0,1	40	3
	03-630-614	60°	2,6	0,1	40	3
	04-630-314	30°	7,4	0,1	40	4
	04-630-614	60°	3,4	0,1	40	4

Z=1

640	код	D	H	L	d
	31-640-010	1	6	40	3,175
	31-640-015	1,5	8	40	3,175
	31-640-020	2	8	40	3,175
	31-640-031	3	12	40	3,175
	04-640-041	4	18	55	4
	06-640-063	6	30	60	6

645	код	D	H	L	d
	03-645-020	2	7	36	3
	03-645-031	3	12	40	3
	31-645-020	2	7	36	3,175
	04-645-041	4	14	40	4
	06-645-061	6	20	46	6
	06-645-062	6	25	60	6
	08-645-083	8	30	80	8

Z=1

700	код	D	L	d
	13-700-080	8	140	13
	13-700-100	10	140	13
	13-700-120	12	140	13
	13-700-150	15	140	13
	13-700-160	16	140	13
	13-700-180	18	140	13
	13-700-200	20	140	13
	13-700-220	22	140	13
	13-700-250	25	140	13
	13-700-300	30	140	13
	13-700-350	35	160	13
	13-700-400	40	160	13
	13-700-450	45	160	13
	13-700-500	50	160	13

721	код	D	L	d
	66-721-120	12	50	hex

632	код	D	H	O	T	L	d
	03-632-336	3	2,60	60°	0	50	3
	04-632-426	2	1,73	60°	0	50	4
	04-632-446	4	3,46	60°	0	50	4
	06-632-666	6	5,20	60°	0	50	6
	08-632-886	8	6,93	60°	0	60	8
	10-632-006	10	8,66	60°	0	75	10
	12-632-226	12	10,39	60°	0	75	12
	03-632-339	3	1,5	90°	0	50	3
	04-632-429	2	1	90°	0	50	4
	04-632-449	4	2	90°	0	50	4
	06-632-669	6	3	90°	0	50	6
	08-632-889	8	4	90°	0	61	8

Z=3

650	код	D	H	L	d
	08-650-082	8	30	60	8
	08-650-083	8	35	80	8

Z=3

651	код	D	H	L	d
	08-651-082	8	30	60	8
	08-651-083	8	40	80	8

Z=3

740	код	D	L	d1	d2
	08-740-060	6	93	6	8
	08-740-080	8	93	6	8
	08-740-100	10	93	8	8
	08-740-120	12	93	8	8
	08-740-150	15	93	9	8
	08-740-160	16	93	10	8
	08-740-180	18	93	10	8
	08-740-200	20	93	10	8
	08-740-220	22	93	10	8
	08-740-250	25	93	12	8
	08-740-260	26	93	12	8
	08-740-280	28	93	12	8
	08-740-300	30	93	12	8
	10-740-320	32	93	12	10
	10-740-350	35	93	12	10
	10-740-380	38	93	15	10
	10-740-400	40	93	15	10
	10-740-450	45	93	15	10
	10-740-500	50	93	15	10
	10-740-550	55	93	15	10
	13-740-600	60	162	16	12,5
	13-740-680	68	162	18	12,5

731	код	s	D	V	L	d
зенкер	66-731-020	2	10	56	33	hex
	66-731-025	2.5	10	56	33	hex
	66-731-030	3	10	56	33	hex
	66-731-035	3.5				hex
	66-731-040	4				hex

z = 2

801	код	D	H	O	підшипник	L	d
for acrylic stone	22-801-150	50.8	22.2	15°	4.76×39×6.9	38	12

z = 2

802	код	D	R	O	підшипник	H	d
for acrylic stone	22-802-127	50.8	12.7	15°	4.76×19×6.9	25.4	12

z = 2
L = 38

740 set1	комплект	D	d1	L	d2
		10	8	93	8
		12	8	93	8
		15	10	93	8
		16	10	93	8
		18	10	93	8
		20	10	93	8
		22	10	93	8
		25	12.5	93	8
		26	12.5	93	8
		28	12.5	93	8
		30	12.5	93	8
		35	12.5	93	10
		40	15	93	10
		45	15	93	10
		50	15	93	10

набір 15шт



740 set2	комплект	D	d1	L	d2
		6	4	93	8
		8	6	93	8
		10	8	93	8
		12	8	93	8
		15	10	93	8
		20	10	93	8
		25	12.5	93	8
		26	12.5	93	8
		28	12.5	93	8
		30	12.5	93	8
		35	12.5	93	10

набір 11шт



302i	код	D	z	H	h	L	d
	302-400-08i	40	4	7	5	65	8
	302-500-08i	50	6	7	5	70	8
	302-500-08i	50	6	8	6	100	12

307i	код	D	z	H	L	d
	307-082-08i	8	2+1	20	35	8
	307-102-08i	10	2+1	20	35	8
	307-122-08i	12	2+1	20	35	8
	307-123-08i	12	2+1	30	60	8
	307-162-08i	16	2+1	20	50	8
	307-182-08i	18	2+1	20	35	8
	307-232-08i	23	2+1	20	35	8
	307-242-08i	24	2+1	20	35	8
	307-252-08i	25	2+1	20	35	8
	307-253-12i	25	2+1	30	60	12
	307-283-12i	28	2+1	30	60	12
	307-303-12i	30	2+1	30	60	12
	307-128-12i	12	2+1	81	48	12
	307-148-12i	14	2+1	81	48	12
	307-158-12i	15	2+1	81	48	12
	307-168-12i	16	2+1	81	48	12

015i	код	D	H	a	підшипник	L	d
	015-250-18i	25	10	45°	5×13×4, 695zz	35	8
	015-300-18i	30	13	45°	5×13×4, 695zz	35	8
	015-400-18i	40	18	45°	5×13×4, 695zz	35	8

020i	код	D	H	підшипник	L	d
	020-143-18i	14	30	5×14×	35	8

005i	код	D	H	h	a	L	d
	005-120-08i	12	11	6	90°	35	8
	005-250-08i	25	17.5	12.5	90°	35	8
	005-320-08i	32	21	16	90°	35	8

008i	код	D	H	R	L	d
	008-080-08i	8	6	4	35	8
	008-100-08i	10	7	5	35	8
	008-120-08i	12	9	6	35	8
	008-160-08i	16	11	8	35	8
	008-180-08i	18	12	9	35	8
	008-200-08i	20	13	10	35	8
	008-300-08i	30	19	15	35	8
	008-350-12i	35	22	17.5	40	12
	008-400-12i	40	25.5	20	40	12

019i	код	D	R	H	підшипник	L	d
	019-020-16i	12	2	5	3×8×4, 693zz	35	6
	019-030-16i	14	3	6	3×8×4, 693zz	35	6
	019-040-16i	16	4	7	3×8×4, 693zz	35	6
	019-050-16i	18	5	8	3×8×4, 693zz	35	6
	019-060-16i	20	6	9	3×8×4, 693zz	35	6
	019-080-16i	24	8	11	3×8×4, 693zz	35	6
	019-100-16i	28	10	14	3×8×4, 693zz	35	6
	019-020-18i	16.7	2	5	4,7×12.7×5, R3zz	35	8
	019-030-18i	18.7	3	6	4,7×12.7×5, R3zz	35	8
	019-040-18i	20.7	4	7	4,7×12.7×5, R3zz	35	8
	019-050-18i	22.7	5	9	4,7×12.7×5, R3zz	35	8
	019-060-18i	24.7	6	10	4,7×12.7×5, R3zz	35	8
	019-080-18i	28.7	8	12	4,7×12.7×5, R3zz	35	8
	019-100-18i	32.7	10	15	4,7×12.7×5, R3zz	35	8
	019-120-18i	36.7	12	18	4,7×12.7×5, R3zz	35	8

027i	код	D	H	підшипник	L	d
	027-163-18i	16	30	8×16×5, 688zz	35	8
	027-164-18i	16	40	8×16×5, 688zz	35	8

027i	код	D	H	підшипник	L	d
	027-163-18i	16	30	8×16×5, 688zz	35	8
	027-164-18i	16	40	8×16×5, 688zz	35	8

327i	код	D	H	підшипник	L	d
	327-162-18i	16	20	8×16×5, 688zz	35	8

z = 2+1

030i	код	D	H	підшипник	L	d
	030-030-18i	33	3	5×13×4, 695zz	50	8
	030-040-18i	33	4	5×13×4, 695zz	50	8
	030-050-18i	33	5	5×13×4, 695zz	50	8
	030-060-18i	33	6	5×13×4, 695zz	50	8
	030-080-18i	33	8	5×13×4, 695zz	50	8
	030-100-18i	33	10	5×13×4, 695zz	50	8

z = 2

031i	код	D	H	підшипник	L	d
	031-030-18i	40	3	5×13×4, 695zz	50	8

z = 3

034i	код	D	H	h	F	L	d
	034-091-08i	18	13	7.5	3	35	8

z = 2

554i	код	D	H	z	змінні ножі	L	d
	554-400-12i	40	14	2	14×14×2	38	12
	554-600-12i	60	14	3	14×14×2	38	12

гвинти, М5
VM-06-57

558i	код	D	H	підшипник	L	d
	558-194-22i	19	40	12,7×1	38	12

z = 2

557i	код	D	H	підшипник	L	d
	557-194-22i	19	40	5×19×6, 635zz	38	12

z = 2

701	код	k	D	h			d
	сталь 4241	701-312-11	3	12	4		h6
		701-420-11	4	20	4		h8
		701-422-11	4	22	4		h8
		701-323-11	3	23	4		h8
		701-430-11	4	30	4		h10
		701-432-11	4	32	4		h10
		701-333-11	3	33	4		h10
		701-439-11	4	39	4		h13

704	код	k	D	h			d
	сталь 4241	704-312-11	3	12	4		h6
		704-420-11	4	20	4		h8
		704-422-11	4	22	4		h8
		704-323-11	3	23	4		h8
		704-430-11	4	30	4		h10
		704-432-11	4	32	4		h10
		704-333-11	3	33	4		h10
		704-439-11	4	39	4		h13

702	код	k	D	h			d
	сталь M2	702-420-11	4	20	4		h8
		702-422-11	4	22	4		h8
		702-430-11	4	30	4		h10
		702-432-11	4	32	4		h10
		702-439-11	4	39	4		h13

705	код	k	D	h			d
	сталь M2	705-312-11	3	12	4		h6
		705-420-11	4	20	4		h8
		705-422-11	4	22	4		h8
		705-430-11	4	30	4		h10
		705-432-11	4	32	4		h10
		705-439-11	4	39	4		h13

703	код	k	D	h			d
	сталь HSSCo	703-420-11	4	20	4		h8
		703-422-11	4	22	4		h8
		703-430-11	4	30	4		h10
		703-432-11	4	32	4		h10
		703-439-11	4	39	4		h13

З додаванням Со-5% (кобальт)

706	код	k	D	h			d
	сталь HSSCo	706-420-11	4	20	4		h8
		706-422-11	4	22	4		h8
		706-432-11	4	32	4		h10
		706-439-11	4	39	4		h13

З додаванням Со-5% (кобальт)

HSS-R - 4241 - приблизно відповідає P2AM3 або HSS

HSS-E - 6542 або M2 - приблизно відповідає P6M5

HSSCo - M35 або M42 - приблизно відповідає P6M5K5

копірвальні кільця	код	D	h	підшипник	d
		30	6.2	8×19×6, 698zz	8
		34	6.2	8×19×6, 698zz	8
		40	6.2	8×19×6, 698zz	8
		50	6.2	8×19×6, 698zz	8
		60	7	12×24×6, 6901zz	12

перехідна втулка	код	D	L			d
		8	23			4
		8	23			6
		12	23			6
		12	23			8
		12,7	23			6
		12,7	23			8






















центра перекидні під шканти	код	D	H	h			d
		14	10	1.5			6
		14	10	1.5			7
		14	10	1.5			8
		14	10	1.5			10
		18	10	1.5			12

Гвинти	код	D	l	L	міцність	d
	VM-02-35	9	5	7,2		M3.5
	VM-06-53	3	6			M5
	VM-06-55	5	8			M5
	VM-06-57	7	10			M5
	VM-06-55 білий	5	8			M5
	VM-01-46	6				M4
	VM-03-38	8	12			M3
	VM-03-39	9	13			M3
	VM-03-30	10	14			M3
	VI-03-1838	3/8				1/8
VM-03-48	8	13			M4	

стопорне кільце	код	D	h	ГВИНТ		d
	широке	12	10	T15		3
	широке	12	10	T15		4
	широке	12	10	T15		4,5
	широке	14	10	T15		5
	широке	14	10	T15		6
	широке	16	10	T15		8
	широке	18	10	T15		10
	вузьке	12	5.5	H1.5		6
	вузьке	14	5.5	H1.5		8
	вузьке	16	6	H1.5		10
вузьке	18	6	H1.5		12	

цанги ER	розмір	D	h	точність	d
	ER16-3	17	27		3
	ER16-1/8	17	27		3,175
	ER16-4	17	27		4
	ER16-6	17	27		6
	ER16-1/4	17	27		6,35
	ER16-8	17	27		8
	ER20-3	21	31		3
	ER20-1/8	21	31		3,175
	ER20-4	21	31		4
	ER20-6	21	31		6
	ER20-1/4	21	31		6,35
	ER20-8	21	31		8
	ER25-3	26	34		3
	ER25-1/8	26	34		3,175
	ER25-4	26	34		4
	ER25-6	26	34		6
	ER25-1/4	26	34		6,35
	ER25-8	26	34		8
	ER32-3	33	40		3
	ER32-1/8	33	40		3,175
	ER32-4	33	40		4
	ER32-6	33	40		6
	ER32-1/4	33	40		6,35
	ER32-8	33	40		8
	ER40-4	41	46		4
	ER40-6	41	46		6
	ER40-1/4	41	46		6,35
	ER40-8	41	46		8
	ER40-12	41	46		12
	ER40-1/2	41	46		12,7
ER40-16	41	46		16	

підшипники	код	D	h			d
	MR 63 zz	6	2,5			3
	MR 83 zz	8	3			3
	693 zz	8	4			3
	684 zz	9	4			4
	MR 104 zz	10	4			4
	604 zz	12	4			4
	R 166 zz	9,6	3			4,7
	R 3 zz	12,7	5			4,7
	MR 85 zz	8	2,5			5
	MR 95 zz	9	3			5
	MR 105 zz	10	4			5
	MR 125 zz	12	4			5
	695 zz	13	4			5
	605zz	14	5			5
	625 zz	16	5			5
	635 zz	19	6			5
	MR 106 zz	10	3			6
	MR 126 zz	12	4			6
	686 zz	13	5			6
	696 zz	15	5			6
	626 zz	19	6			6
	R 4a zz	19,1	7,14			6,35
	607 zz	19	6			7
	MR 128 zz	12	3,5			8
	MR 148 zz	14	4			8
	688 zz	16	5			8
	698 zz	19	6			8
	608 zz	22	7			8
	628 zz	24	8			8
	638 zz	28	9			8
	629 zz	26	8			9
	6000 zz	26	8			10
6300 zz	35	15			10	
6801 zz	21	5			12	
6901 zz	24	6			12	
6001 2RS	28	8			12	
6201 zz	32	10			12	
R 1212 zz	19,1	3,97			12,7	
6002 zz	32	9			15	
6202 2RS	35	11			15	
6203 2RS	40	12			17	
203/42	42	12			17	
61904 zz	37	9			20	
6004 zz	42	12			20	
6204 zz	47	14			20	
6304 zz	52	15			20	
6005 zz	47	12			25	
6205 zz	52	15			25	
6305 zz	62	17			25	
6006 zz	55	13			30	
6306 2RS	72	19			30	
6308 zz	90	23			40	

201A	код	h	L	W,рp			d																	
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>270</td></tr> </table>		F, Ньютон	270	30																		
F, Ньютон																								
270																								
201B		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>900</td></tr> </table>		F, Ньютон	900	130																		
F, Ньютон																								
900																								
201C		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>1000</td></tr> </table>		F, Ньютон	1000	144																		
F, Ньютон																								
1000																								
225D		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>2270</td></tr> </table>		F, Ньютон	2270	242																		
F, Ньютон																								
2270																								
203F		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>2270</td></tr> </table>		F, Ньютон	2270	340																		
F, Ньютон																								
2270																								
203FL		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>2270</td></tr> </table>		F, Ньютон	2270	367																		
F, Ньютон																								
2270																								
200WH		h	L	W,рp																				
		100	240	636																				
<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>4000</td></tr> </table>		F, Ньютон	4000																					
F, Ньютон																								
4000																								
200WLH		h	L	W,рp																				
		100	290	674																				
<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>4000</td></tr> </table>		F, Ньютон	4000																					
F, Ньютон																								
4000																								
204GBL		h	L	W,рp																				
		316	1200																					
<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>6300</td></tr> </table>		F, Ньютон	6300																					
F, Ньютон																								
6300																								
101B		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>1000</td></tr> </table>		F, Ньютон	1000	136																		
F, Ньютон																								
1000																								
20820		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td></td></tr> </table>		F, Ньютон		136																		
F, Ньютон																								
202F		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>2270</td></tr> </table>		F, Ньютон	2270	386																		
F, Ньютон																								
2270																								
102B		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>1000</td></tr> </table>		F, Ньютон	1000	130																		
F, Ньютон																								
1000																								
101D		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>1800</td></tr> </table>		F, Ньютон	1800	315																		
F, Ньютон																								
1800																								
12205		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>1820</td></tr> </table>		F, Ньютон	1820	602																		
F, Ньютон																								
1820																								
101EL		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>1800</td></tr> </table>		F, Ньютон	1800	748																		
F, Ньютон																								
1800																								
301AM		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>420</td></tr> </table>		F, Ньютон	420	260																		
F, Ньютон																								
420																								
302FM		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>1360</td></tr> </table>		F, Ньютон	1360	260																		
F, Ньютон																								
1360																								
302DM		h	L	W,рp																				
		215	440																					
<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>1500</td></tr> </table>		F, Ньютон	1500																					
F, Ньютон																								
1500																								
40323		h	L	W,рp																				
		<table border="1"> <tr><td>F, Ньютон</td></tr> <tr><td>1200</td></tr> </table>		F, Ньютон	1200	315																		
F, Ньютон																								
1200																								
запаска		d	D	L																				
		M4*25mm	4	10	29																			
		M5*40mm	5	13	47																			
		M6*45mm	6	14	53																			
		M8*70mm	8	18	70																			
		M10*80mm	10	21	88																			